HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
REAR SUNSHADE P/N 08R10-S84-100	1999 ACCORD 4-DOOR	AII 20029
		Issue Date SEP 1998

PARTS LIST

Rear sunshade

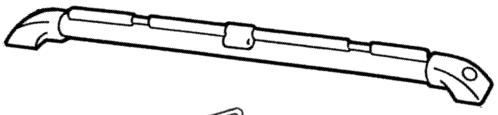

2 Hooks

Right bracket
(passenger's side)

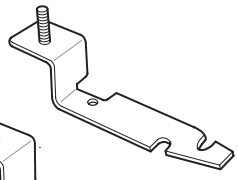

Left bracket
(driver's side)

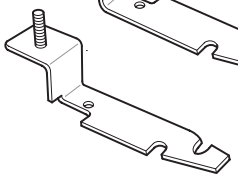

2 Caps

2 Flange nuts

2 Collars

2 Cushion tapes

TOOLS REQUIRED

Phillips screwdriver
Ratchet
Utility knife
Felt-tip pen
9 mm Socket
Metric tape measure

INSTALLATION

NOTE: These instructions show the sunshade bracket being installed on the right (passenger's) side. The same procedure applies to installing the sunshade bracket on the left (driver's) side.

1. Open the trunk lid. Remove the right rear speaker grille (two screws), and pry up on the three retaining tabs. Take care not to damage the retaining tabs.

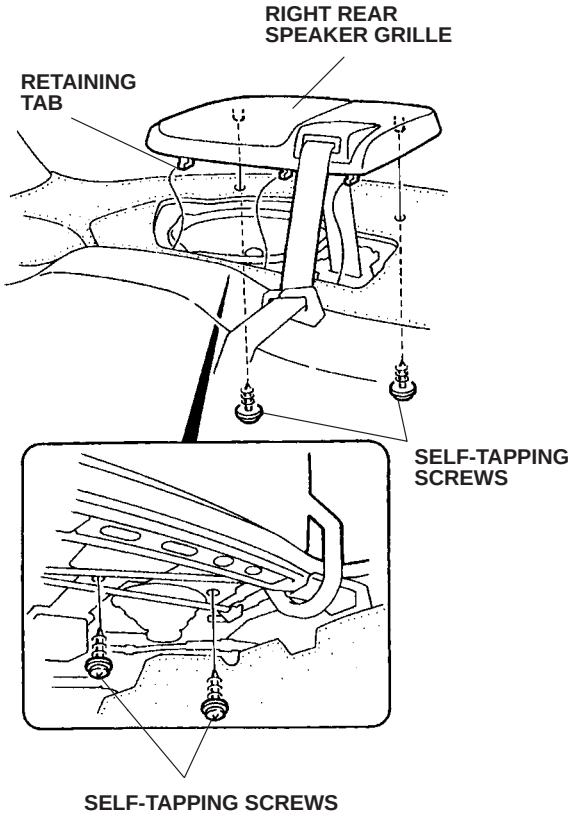

© 1998 American Honda Motor Co., Inc. – All Rights Reserved

2. Using a tape measure and a felt-tip pen, measure the right side of the rear parcel shelf and mark the measurement as shown. Cut the rectangle out of the rear parcel shelf with a utility knife.

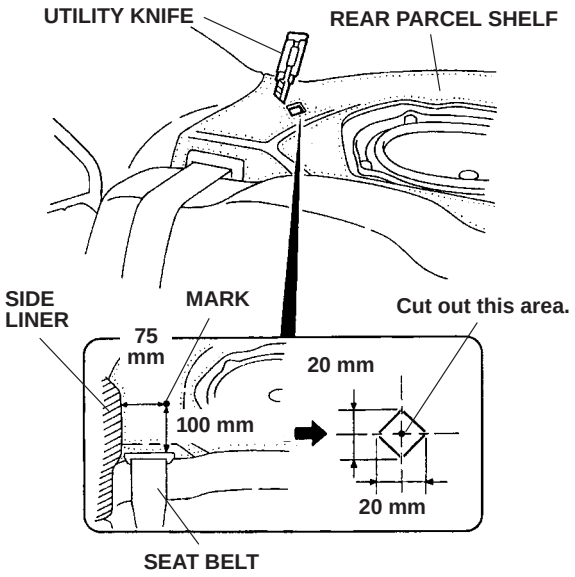

3. Loosen the four bolts securing the right speaker to the metal parcel shelf. Position the right bracket with its stud extending out through the square hole you made in the parcel shelf. Slide the cutout in the other end of the right bracket under the bolt head.

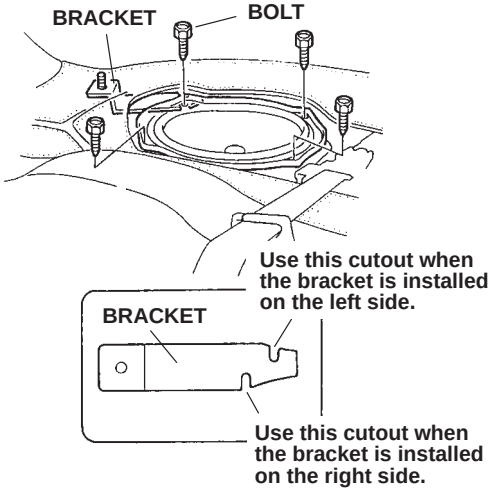
BRACKET
BOLT
Use this cutout when the bracket is installed on the left side.
BRACKET
Use this cutout when the bracket is installed on the right side.

4. Retighten the four bolts. Be sure that the bracket is tightened securely; it should not move or rattle.
5. Remove the left rear speaker grille, then repeat steps 2 through 4 to install the left bracket on the left side of the vehicle.
6. Reinstall both rear speaker grilles.
7. Slide a collar over each stud extending from the brackets; then install the rear sunshade with the two flange nuts. Install the rear sunshade with its handle facing the front. The rear sunshade will not roll up if it is installed improperly.

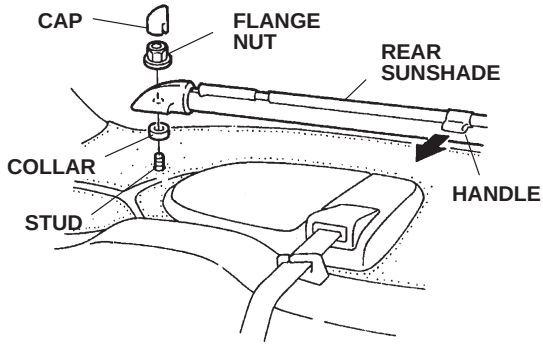

8. Install a cap over each nut.
9. Gently pull down on the headliner, and slide one hook (from the kit) onto the headliner in the area shown.

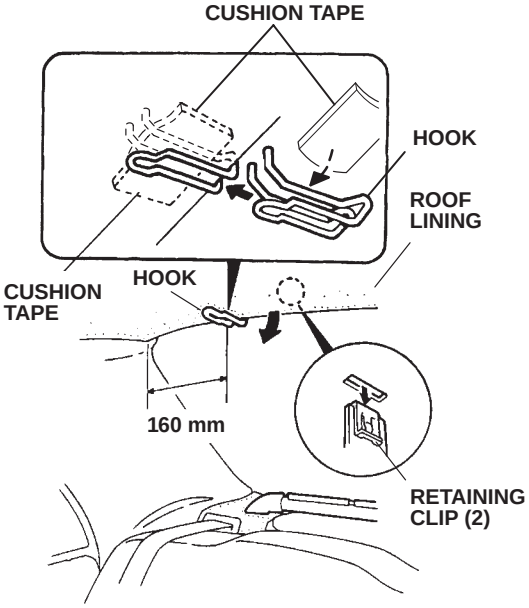

10. Attach one cushion tape to the inside of the headliner over the hook to secure the hook in place.
11. Repeat steps 9 and 10 to install the hook on the other side of the vehicle.
12. Reinstall the headliner clips if necessary.
13. Pull out the sunshade, attach it to the two hooks, release and return it to the parcel shelf several times to check for smooth operation.

© 1998 American Honda Motor Co., Inc. – All Rights Reserved